

Kitchen Opening Instructions

1. Check Hot Water

Check both sinks to see if there is hot water. If there is no hot water the water heater pilots will need to be lit.

Even if there is hot water, verify water heaters are set to HIGH. There are two water heaters in the closet in the small bathroom. Both water heaters should be set to HIGH. When setting to high, you will hear the burners ignite if the pilots are lit and operational.

2. Check if range lights and light the range pilots if needed (should have been lit by someone else before site prep); for sessions the oven does not need to be lit, skip step e.

Please read through the instructions completely before starting to light the pilots.

The range pilots will need to be lit if the gas feed line has been cut off.

- a. Locate the striker - a 10" to 12" long plastic tube about 1/3" in diameter which lights a flame on one end when pulling the trigger. It is sitting on top of the rack above the kitchen island. (Matches can be used but will need to extend about 6 inches through narrow opening during lighting procedure.)
- b. Make sure all of the control knobs for the burners and ovens (located on the control panel of the front of the range) are in the OFF position.
- c. *Turn the gas line feed to 'ON' position. Gas line ON/OFF LEVER is west of the southwest corner of the range. If you stand at the south side of the range and step closer to the west wall, you will see the on/off lever about at your knee level. (Off is perpendicular to the gas line. On is parallel to the gas line.)*
- d. Light the oven first and then wait six minutes before lighting top burners to purge all air from the range. *(YOU DON'T HAVE TO LIGHT THE OVEN. If using only the burners or griddle, then only those pilot lights need to be lit.)*
- e. Lighting the oven pilot (each oven has its own pilot):
 1. Turn the oven thermostat to the OFF position.
 2. Open the oven door and remove the oven bottom and fire plate to expose pilot and burner.
 3. Open the kick panel below the oven door, turn the knob on the safety valve to the PILOT position, and depress the button on oven safety valve.
 4. Light the pilot while continuing to depress the button on the safety valve. Wait 30 seconds, then release the button. The pilot should remain lit.
 5. Turn the knob on the safety valve to the ON position.
 6. Close the kick panel.
 7. Replace the fire plate and oven bottom.
- f. Lighting the top burner and griddle pilots (each has its own pilot).
 1. Turn all the top-burner control knobs to the OFF position.
 2. Use a match or lighter to light all the pilots (the griddle has several pilot lights).

3. The convection oven (red and silver color and on four skinny legs) has electronic ignition and needs no special attention. Turn knobs and it will operate. Turn on the blower with the ON-OFF switch.

Call Dick Ashdown 815-866-8282 or Carol Bartles 815-440-9639 if you have additional questions.